


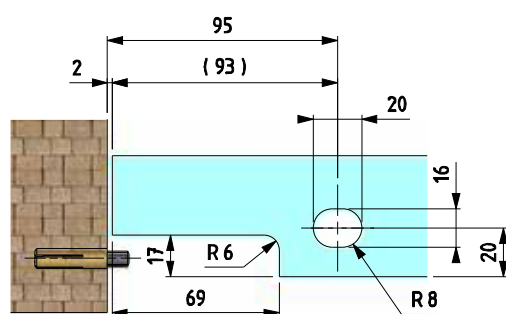
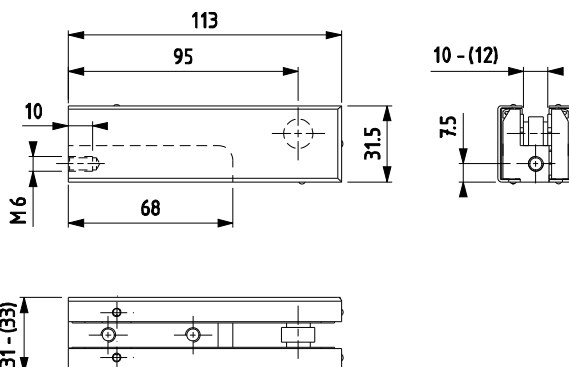


8204

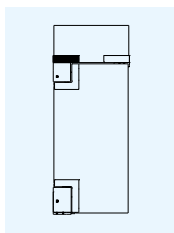

- Attacco sopra luce a muro laterale senza battuta.
- Fijación a bisagra superior y montante sin tope.
- Transom attachment -side wall without stop .
- Kupplung für Oberlichtfenster. Montage an der Seitenwand. Ohne Anschlag.
- Fixation latérale mur-imposte sans butée.

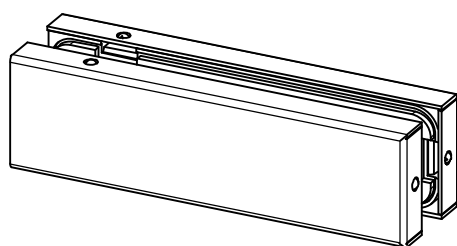

8207



- Attacco sopra luce a muro laterale con battuta.
- Fijación a bisagra superior y montante con tope.
- Transom attachment -side wall with stop.
- Kupplung für Oberlichtfenster. Montage an der Seitenwand. Mit Anschlag.
- Fixation latérale avec butée.

